## NEXUS<sup>™</sup> 50


GENERAL WASTE FLAP RETROFIT INSTRUCTIONS

IMPORTANT NOTE:- ENSURE ALL RELEVANT PERSONNEL READ THESE INSTRUCTIONS PRIOR TO OPERATION


## **Kit Contents:**

Glasdon


General Waste Flap x1	
Axle Rod	x1
Axle Clamp	x2
Spacer	x2

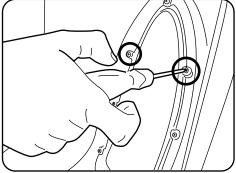

1. From inside of lid remove 2 off screws from the general waste aperture.

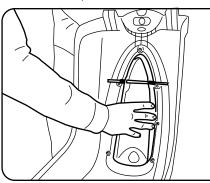


4. From the inside of the lid, line up the flap with the aperture so that the axle sits above the bosses.

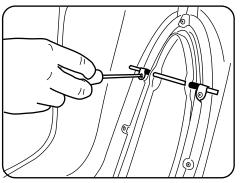


7. Using a screwdriver fix the screws into position.

## **Tools Required:**


Screw Driver

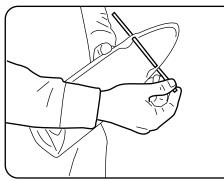


2. Place axle rod through holes in general waste flap.

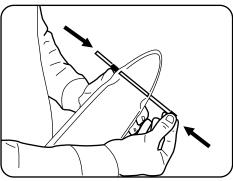

3. Place 1 off spacer on either end of the axle rod.

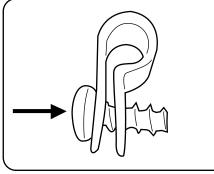

5. Place 2 off screws (removed from aperture) through the 2 off axles clamps.

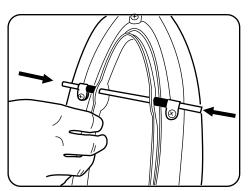

6. Place axle clamps over both ends of the axle rod.



Glasdon U.K Limited

Preston New Road BLACKPOOL Lancashire FY4 4UL Tel: 01253 600410 Fax: 01253 792558 email: sales@glasdon-uk.co.uk web: www.glasdon.com

Glasdon and NEXUS<sup>™</sup>ARE TRADEMARKS OF GLASDON GROUP OR ITS SUBSIDIARIES IN THE U.K AND OTHER COUNTRIES

- A planned maintenance schedule of regular inspection is recommended, replacing
- components as necessary. Replacement components are available direct from GLASDON UK LTD.
- GLASDON UK LTD cannot be held responsible for claims arising from incorrect installation, unauthorised modifications or misuse of the product.

Issue 1 October 2010 C000/0374 © Copyright 2010 Glasdon UK Ltd reserve the right to alter specifications without prior notice.