




AUTO-MATE™ INSTRUCTION LEAFLET

NOTE: Ensure that all relevant personnel read the points listed below and that a copy is passed on to staff involved with the installation. Please also refer to the 'Manual Handling Operations Regulations 1992' during the handling of the product and materials used for installation.




Kit Contents:

Fire Extinguisher Cover	x1
3mm Allen Key	x1
M5 Nyloc Nut	x4

Assembly:

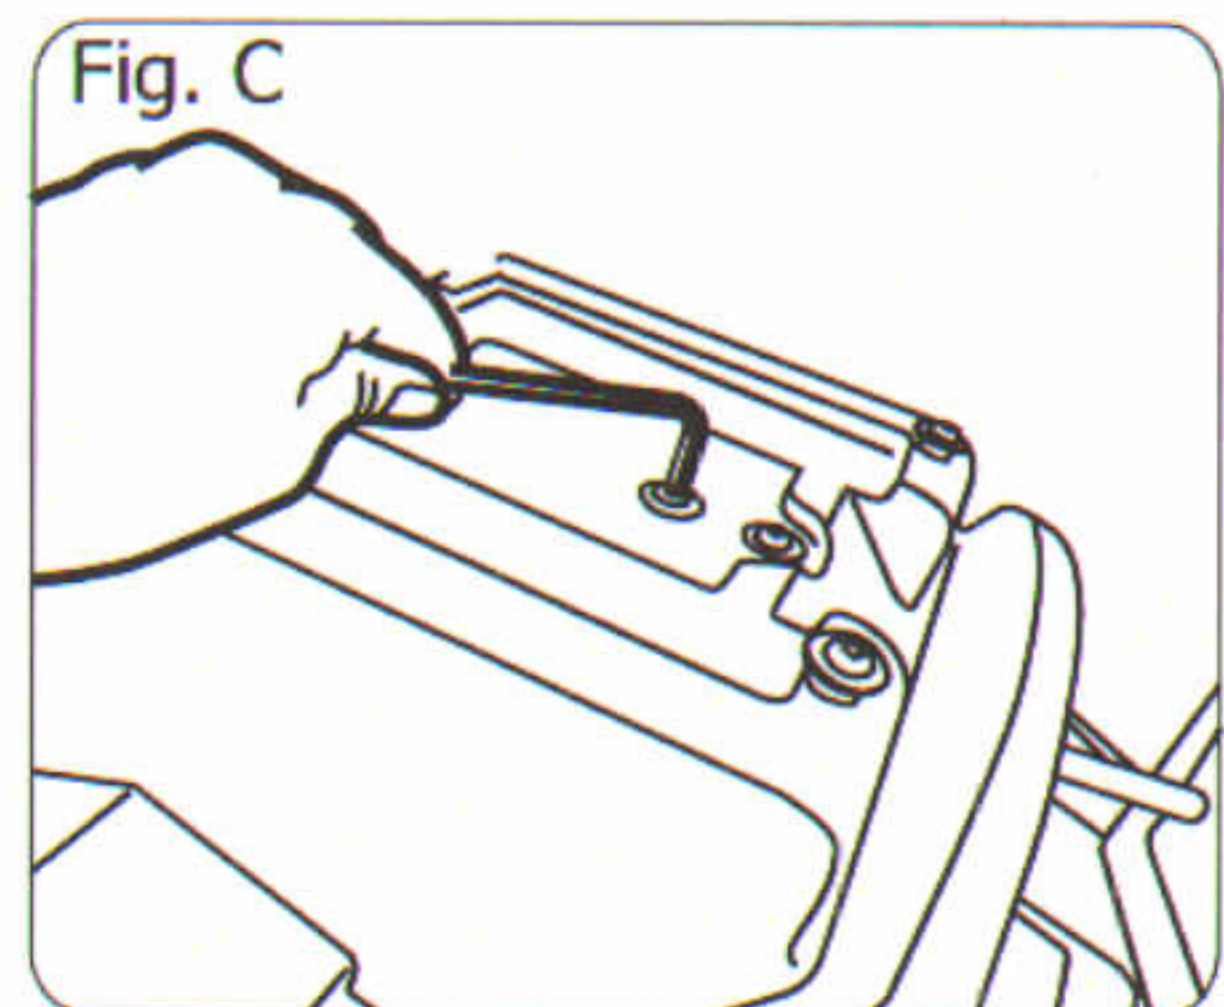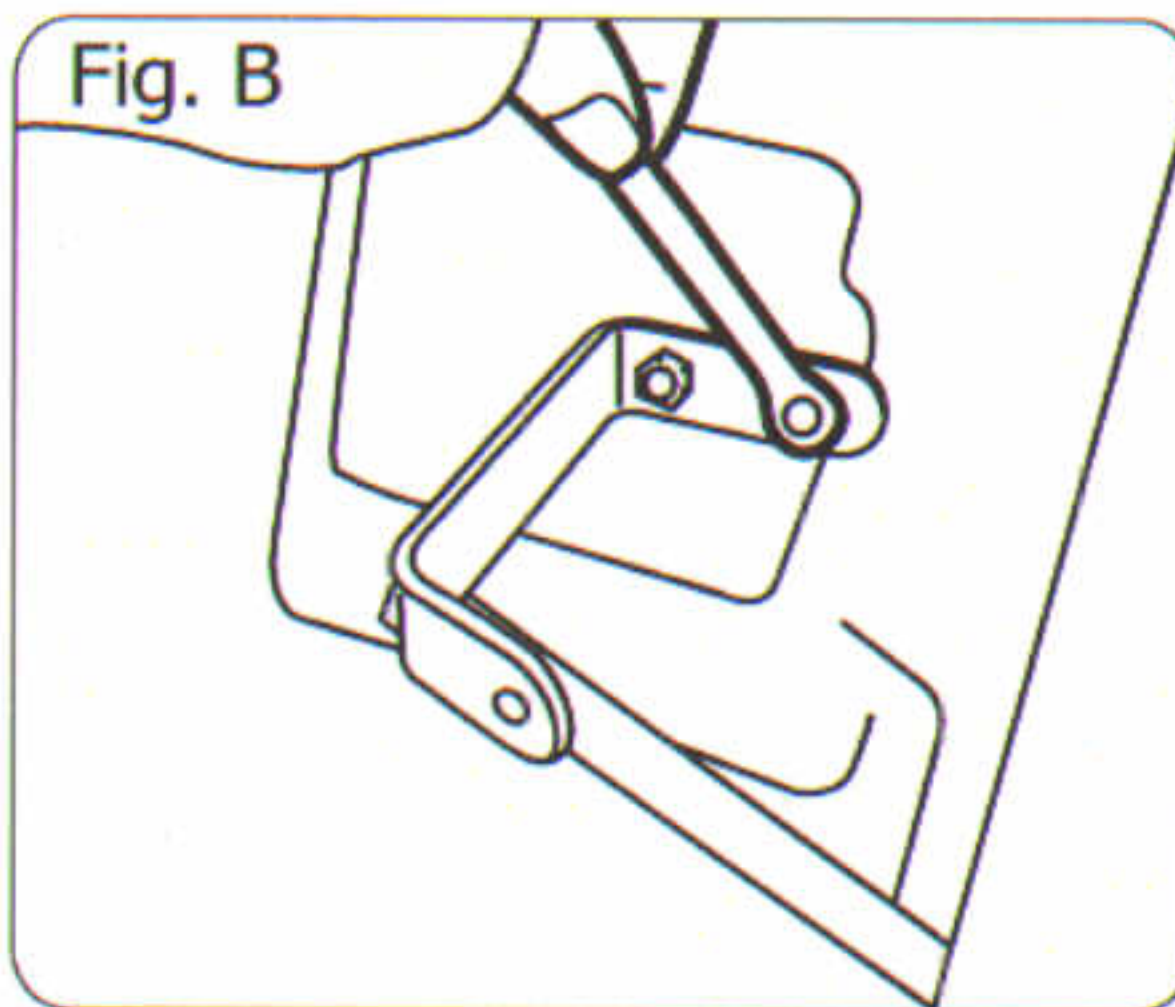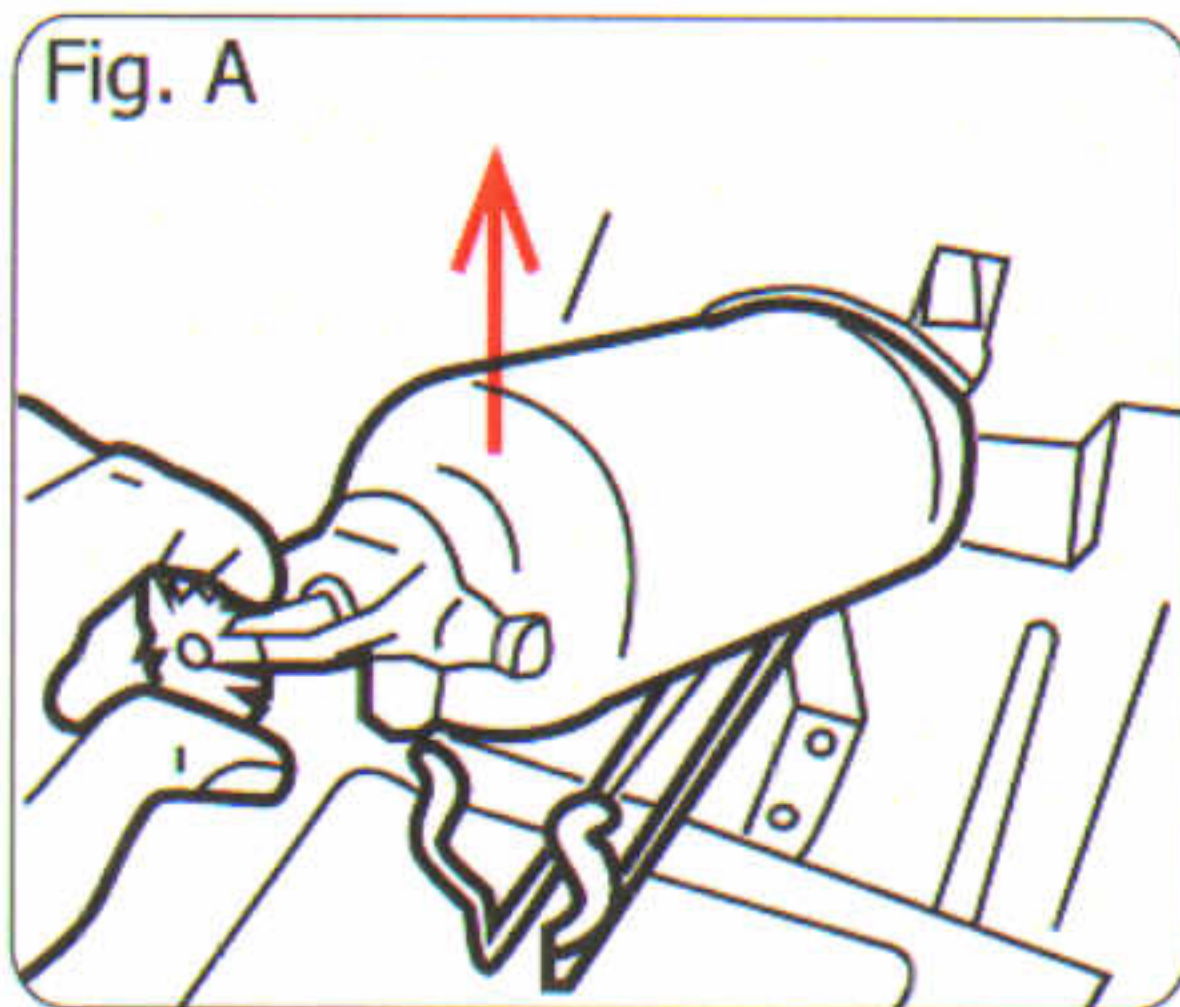

1. Remove the fire extinguisher from the Extinguisher holder framework. (Fig A)
2. Remove all existing bracketry from the unit using a 3mm Allen Key and a 8mm Ring Spanner. (Fig B and C).
3. Replace the Auto-Mate Extinguisher Bracket to the hood using the M5 Nyloc Nuts provided and the existing bolts. (As shown in Fig B and C).
4. Using the existing nuts and bolts replace the extinguisher holder framework including fire extinguisher cover to the unit using the 3mm allen key and 8mm ring spanner (Fig D and E).
5. Once all framework is secure replace the extinguisher into the holder. It should now be disguised by the cover. (Fig F).

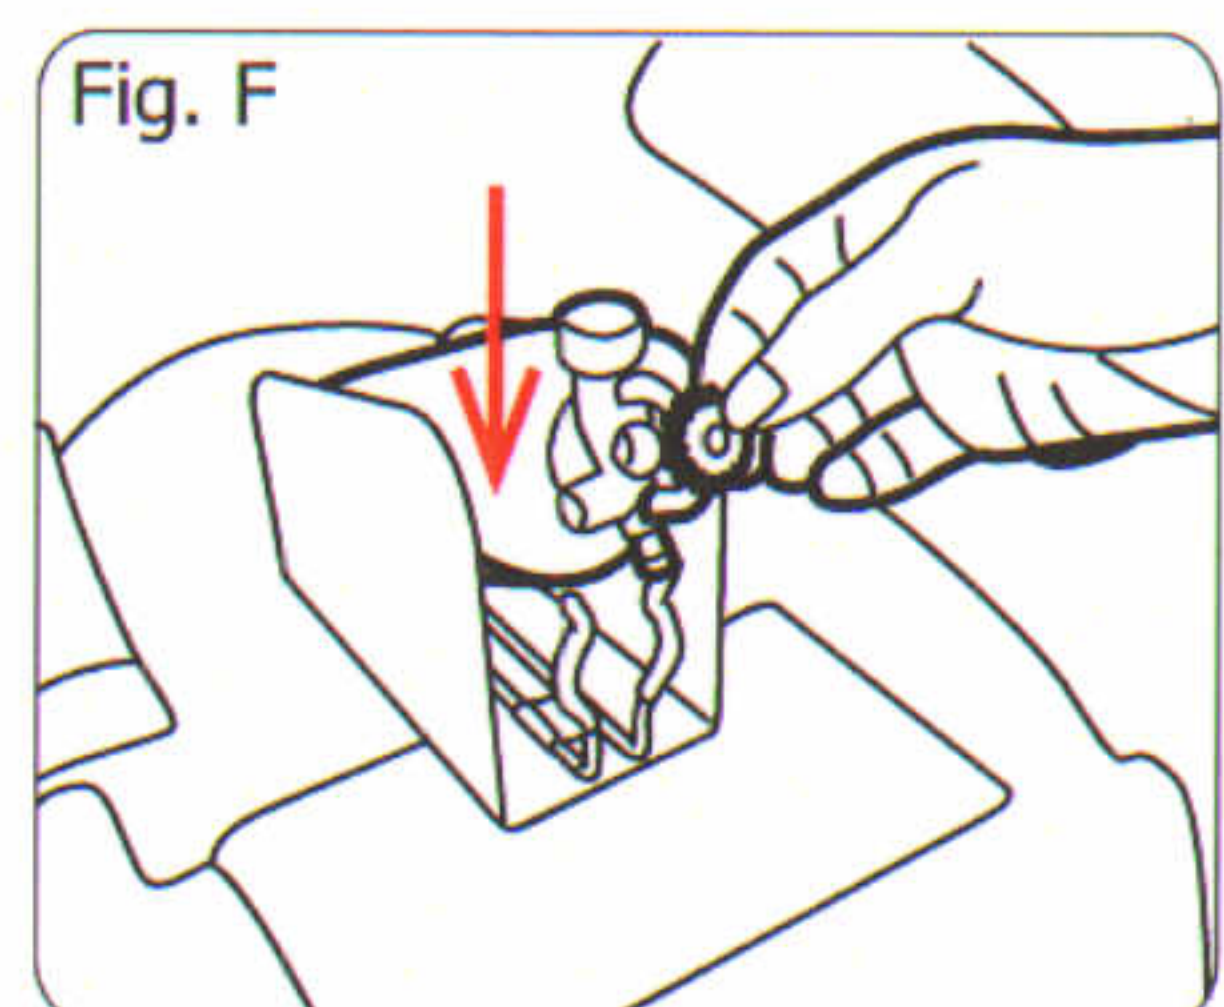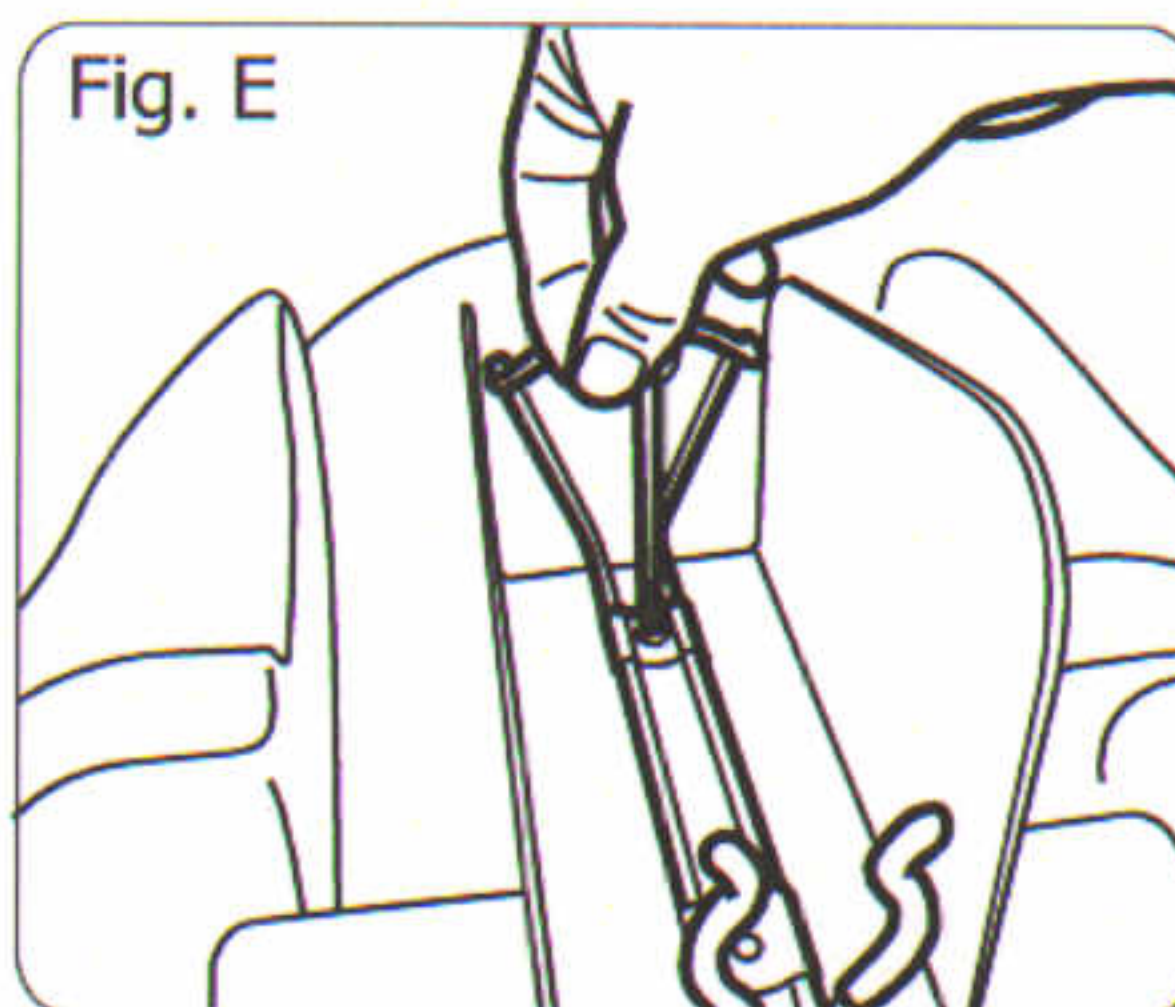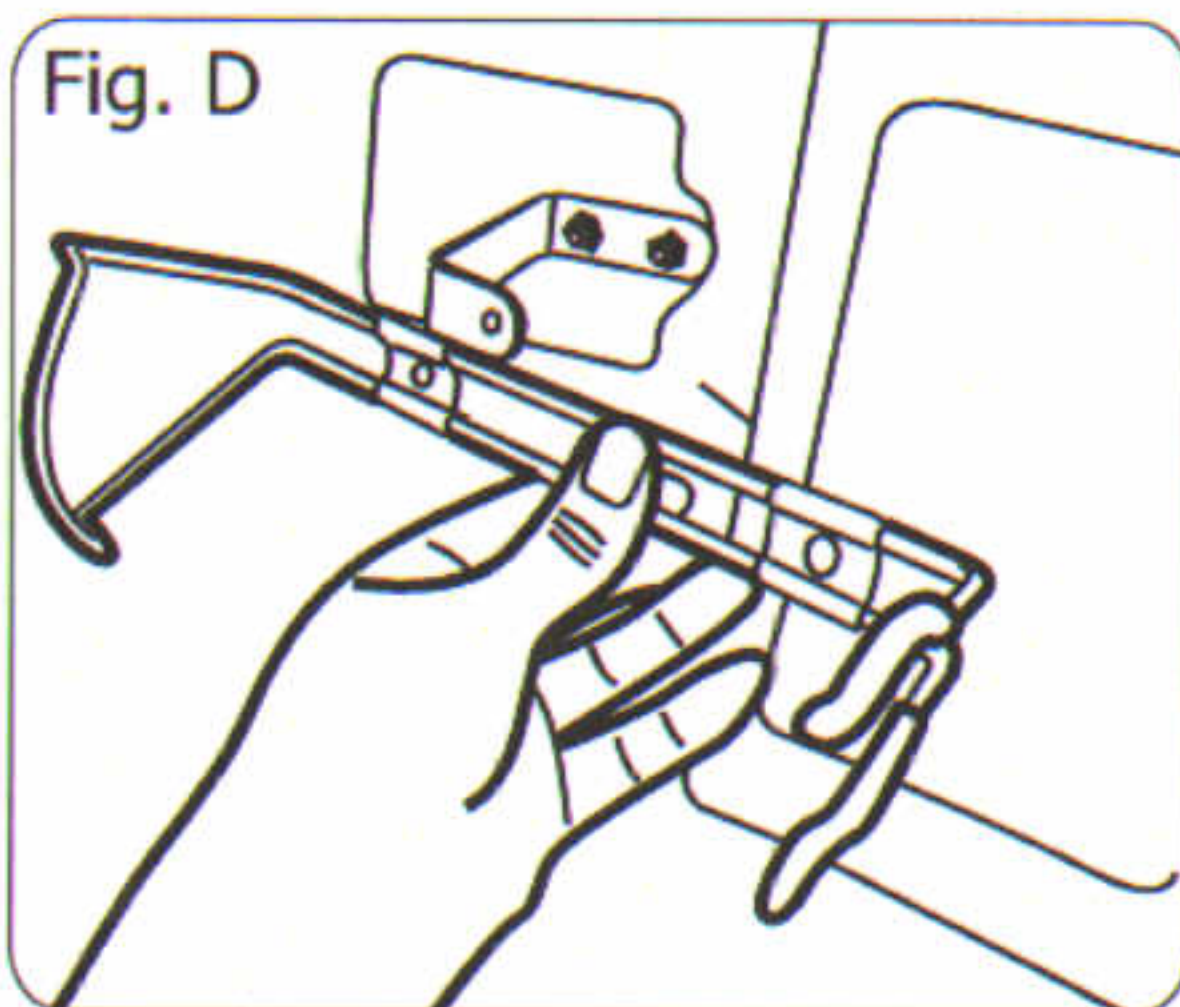

 **Glasdon** AND AUTO-MATE ARE TRADEMARKS OF GLASDON GROUP AND ITS SUBSIDIARIES IN THE U.K. AND OTHER COUNTRIES.

Replacement components are available direct from GLASDON.

GLASDON cannot be held responsible for claims arising from incorrect installation, unauthorised modifications or misuse of the product.

Issue 1 August 2012 C000/0428

© Copyright August 2012

Glasdon U.K. Ltd reserves the right to alter specifications without prior notice.

 **Glasdon**

Glasdon U.K. Limited
Preston New Road
BLACKPOOL

Lancashire FY4 4UL

Tel: 01253 600410

Fax: 01253 792558

E-mail: sales@glasdon-uk.co.uk

Web: www.glasdon.com