

ORBIS™ MESH CAGE INSTALLATION INSTRUCTIONS





Ensure that all relevant personnel read the points listed below and that a copy is passed on to staff involved with the installation. Please also refer to the 'Manual Handling Operations Regulations 1992' during the handling of the product and materials used for installation.

KIT CONTENT

Mesh Cage	x1
Fixing Brackets	x2
Nyloc Nut M8	x4
Washer M8	x8
M8x20 Socket Button Head Screw	x4
Clear Griptight Polybag	x1

TOOLS REQUIRED:

5mm Allen Key
13mm Ring Spanner

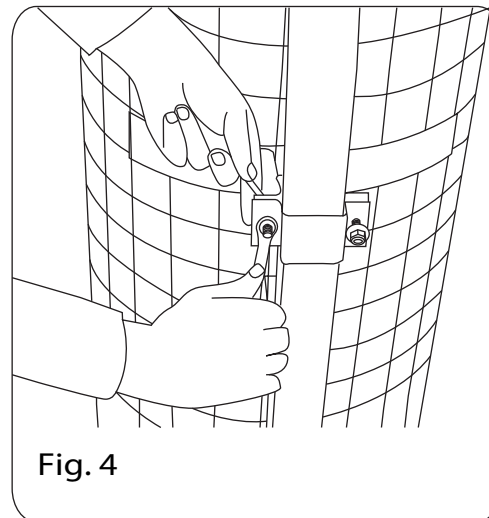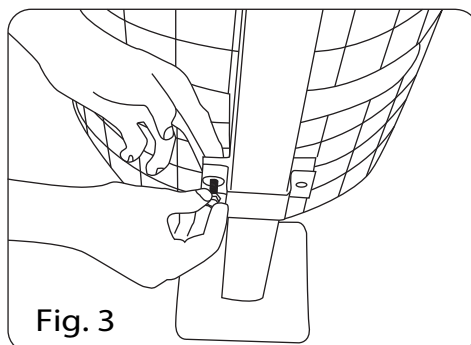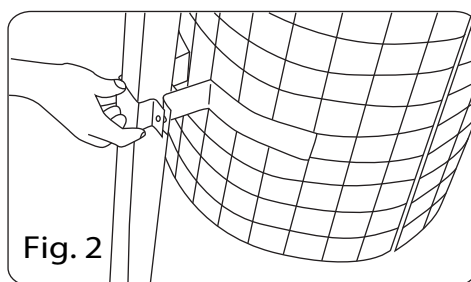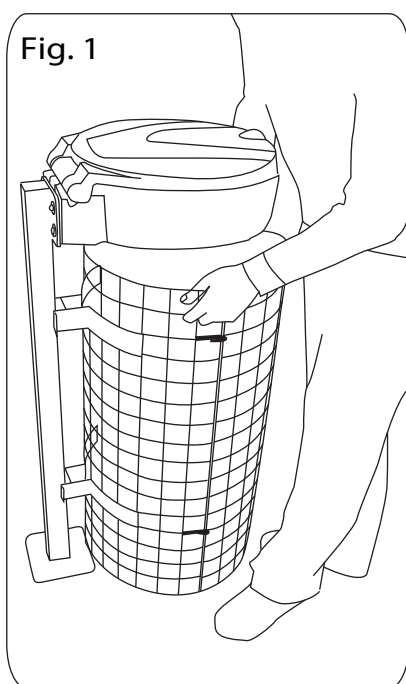

1. Slot the mesh cage mounting brackets onto the post and rest the mesh cage on the ground. Fig 1.
2. Slot on the fixing brackets and thread the screws through a washer each and then through the corresponding holes in the mesh cage plate and the fixing brackets. Fig 2.
3. Add a washer and a nyloc nut to the end of each screw and tighten 3/4 of the way. Fig 2
4. Slide the mesh cage so the it is touching the underside of the Orbis sack holder and tighten up the four screws to fix the mesh cage into position. Fig 4.

Please note: We recommend that for step 4 you ask another person to hold the mesh cage in position whilst you are tightening the fixings.